


## Profiled Sheetting P3 Eaves Fitting Installation Guide

TECHNICAL  
NOTE


Et-02/03/en/v1

Profile 3 eaves fittings are handed depending on how the sheets are fitted. Left handed fittings should be used when the sheets are laid from left to right. The fittings sit on the eaves beam / purlin, are butt jointed and close off the corrugation voids.


### Eaves closers

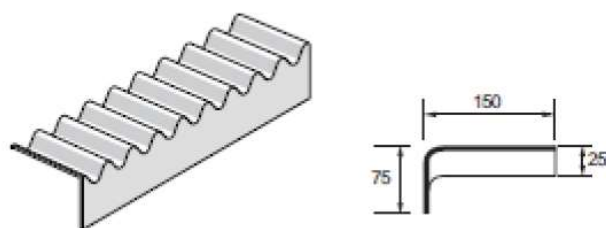

### Eaves fillers

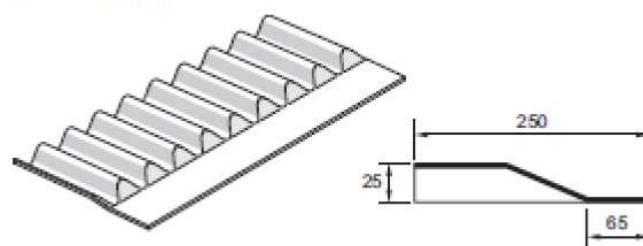

The detail below shows the typical fixing details for an eaves closer **when the sheeting is laid from left to right**. Details for the eave's filler are similar.

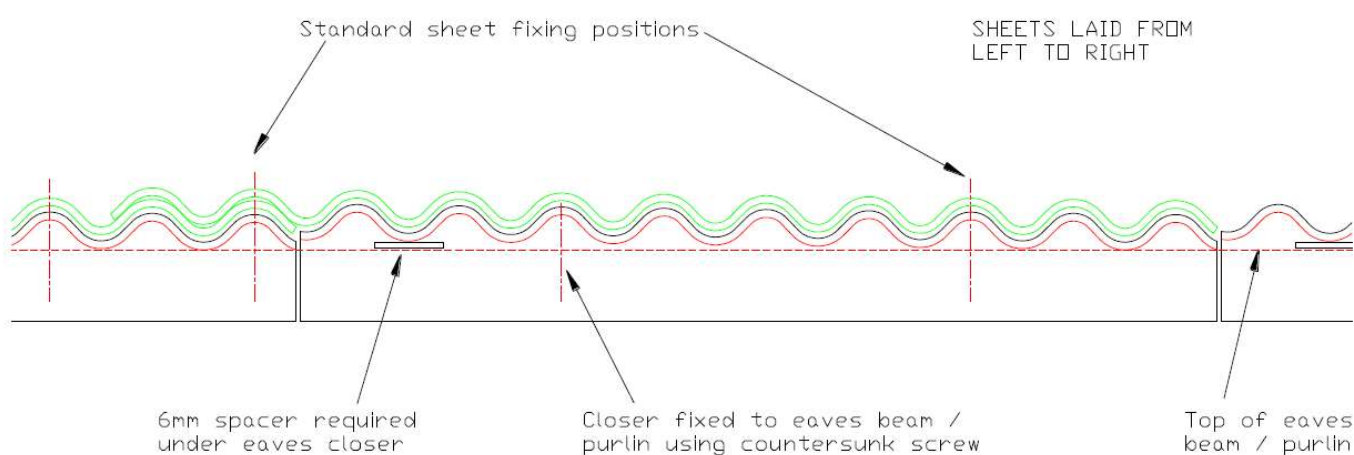

The right hand side of the first full closer should be aligned with the right hand side of the first sheet. A closer can be cut down to fit under the left hand side of this first sheet. The downstand of the closer is tapered to allow for the way the sheets overlap, so a 6mm spacer should be used under the left hand side of the closer. As the sheet fasteners only penetrate through the right hand side of the closer, a countersunk screw can be used to hold the left hand side of the closer in position before laying the sheet. There is a nominal 3mm gap between the closers.

#### Disclaimer

The information in this Material Information Sheet is correct at time issuing. However, due to our committed program of continuous material and system development we reserve the right to amend or alter the information contained therein without prior notice. Please contact your local Etex Exteriors Sales Organization to ensure you have the most current version.

All information contained in this document is copyrighted ©.

All figures contained in this document are illustrations and should not be used as construction drawings.

This information is supplied in good faith and no liability can be accepted for any loss or damage resulting from its use.