


Gutter Trim

A how-to guide to installing gutter trims to a Techno EPDM flat roof.

	Step 1 Install a 2" x 1" batten to the roof perimeter , level with roof deck.
	Step 2 Install the base plate as shown, 5mm below the deck using plain nails.
	Step 3 Adhere membrane and dress over the base plate.
	Step 4 Pull rubber taut and install top plate as shown, secured with polynails. Please allow a 5mm gap between trims for expansion and contraction.

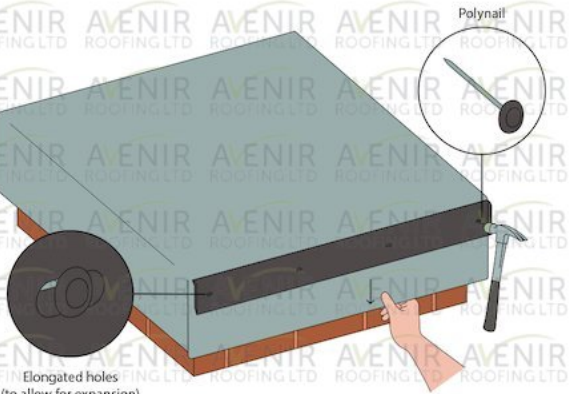

Step 5

Trim any excess rubber with a sharp blade.