
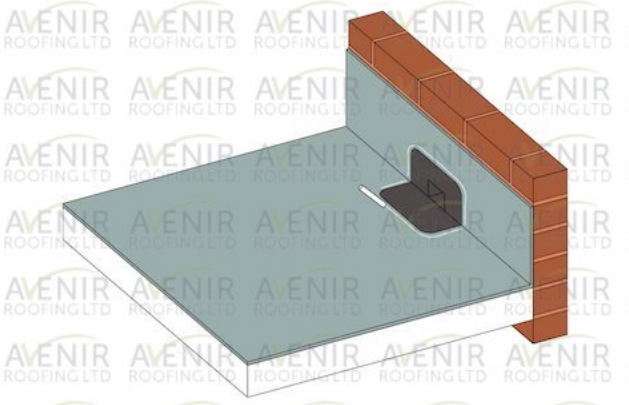


Horizontal Rainwater Outlet


A how-to guide to installing a horizontal rainwater outlet.

	Step 1 Place the outlet through the wall and mark around it using a crayon or similar, allowing an additional 1cm around the perimeter.
	Step 2 Stir thoroughly and prime the underside of the outlet and the marked area on the rubber using a quick scrubber pad and handle. Allow both surfaces to dry.
	Step 3 Mate the outlet to the rubber and seal in place using a penny and silicone roller.
	Step 4 Round the corners of the 18" flashing (outlet kit) with scissors and neatly position over outlet. Mark the perimeter with crayon.

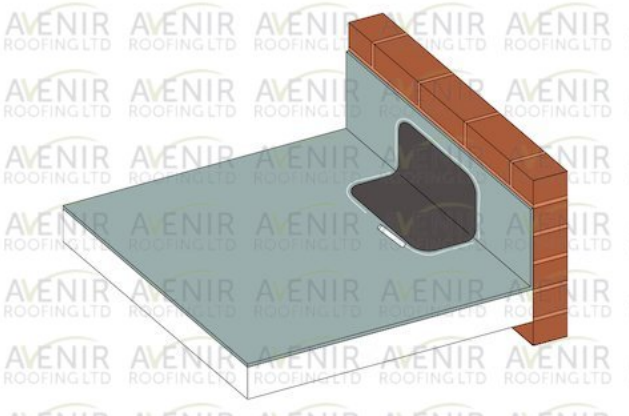

Step 5

Prime the rubber and outlet using the scrubber pad and handle and extend primer beyond the crayon line by 2cm and into the mouth of the outlet by 100mm.

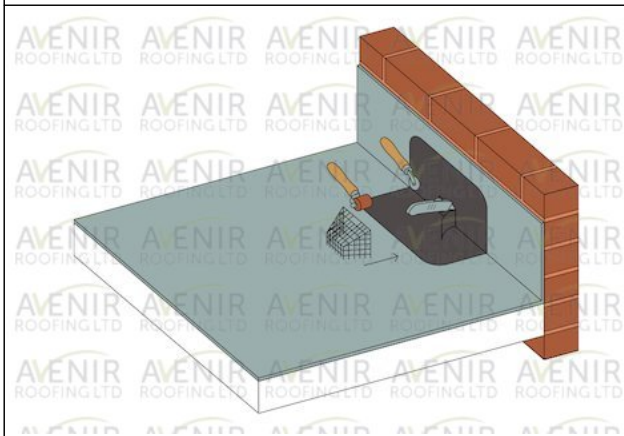

Step 6

Once touch dry, working from the bottom, position the 18" flashing and carefully remove the backing paper. Ensure it is tightly sealed into the corners and use a penny and silicone roller. Carefully cut the sides and top at the aperture and allow flap to drop into the primed outlet.