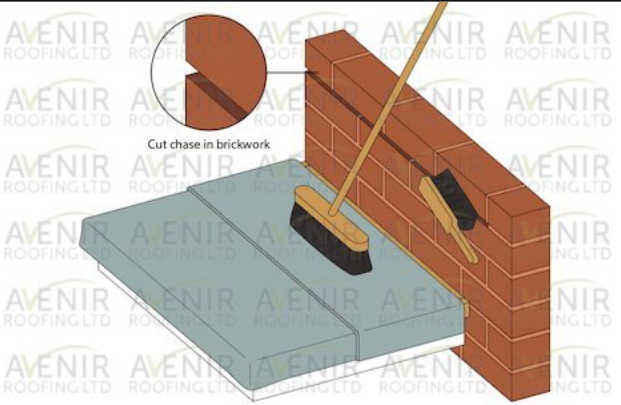
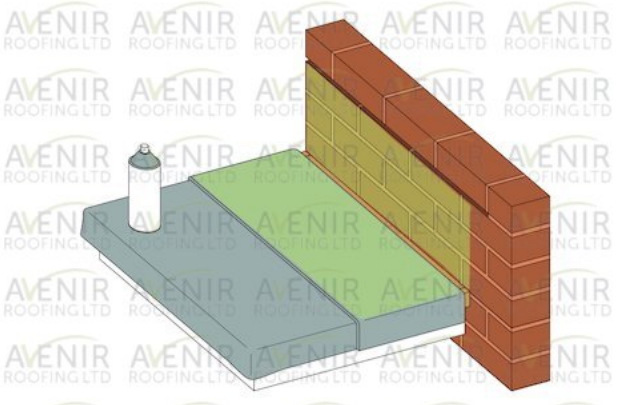
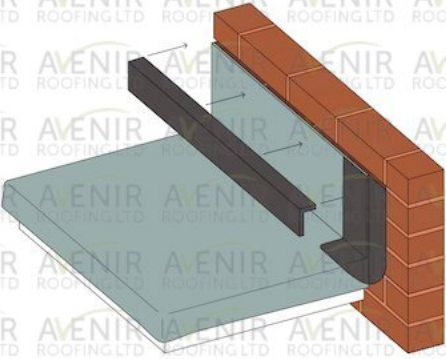


Wall Trim Flashing

A how-to guide to installing a wall trim flashing.

 The diagram shows a cross-section of a brick wall and a grey rubber flashing strip. A circular inset shows a close-up of a 'Cut chase in brickwork' where a rectangular hole has been cut into the brick. A broom is shown cleaning the wall surface, and a brush is shown applying a substance to the rubber strip.	Step 1 Thoroughly clean the wall, chase and rubber.
 The diagram shows the grey rubber flashing strip being applied to the brick wall. A green layer of contact adhesive is visible between the rubber and the wall. A small white can of adhesive is shown next to the strip.	Step 2 Apply a thin coat of contact adhesive to the rubber and the wall .
 The diagram shows the grey rubber flashing strip being pressed onto the brick wall. The green adhesive layer is now between the rubber and the wall.	Step 3 Once touch dry, starting at the bottom, carefully mate the surfaces together. Smooth by hand and silicone roller.
 The diagram shows the grey rubber flashing strip being trimmed with a utility knife. The strip is now flush with the wall.	Step 4 Trim membrane.

	Step 5 Position a piece of 9" QuickSeam Formflash or a Detail Kit as shown and mark the perimeter, allowing an extra 1 cm.
	Step 6 Apply Techno primer to the marked area using a Scrubber pad and handle, allow primer to dry.
	Step 7 Peel back a section of backing paper and, starting from the top, slowly work downwards as shown.
	Step 8 Apply a gentle heat source to the corner if needed.
	Step 9 Thoroughly roller with Silicone and Penny Rollers.

	
	Step 10 Insert wall trim into chase and secure at 600mm centres with the supplied fixings. Rawplugs are not needed if a 5.5mm masonry drill bit is used.
	Step 11 Thoroughly seal chase with Wall Mastic.