




## COROTHERM RAFTER GLAZING BAR up to 25mm

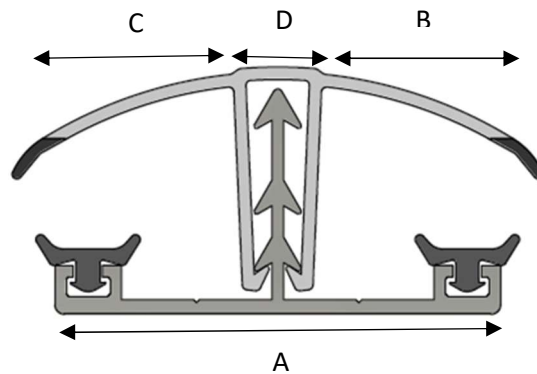


### GAP BETWEEN SHEETS

An expansion gap of 3mm is needed between the edge of the sheet and the centre of the glazing bar.

So the total gap between each sheet will need to be  
 $3\text{mm} + 10\text{mm} + 3\text{mm} = 16\text{mm}$ .

### DIMENSION SIZE (mm)

A	47
B	24
C	18.5
D	10

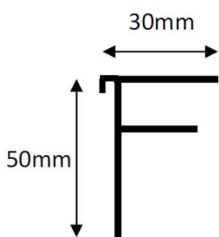

### GAP FOR SIDE FLASHINGS

The Side Flashings attach along the edge of the Rafter Glazing Bar. An expansion gap of 3mm is needed between the edge of the sheet and the centre of the glazing bar.

So the total gap between the sheet and the edge of the roof will need to be  
 $3\text{mm} + 10\text{mm} + 30\text{mm} = 43\text{mm}$ .

## MAXIMUM DISTANCE BETWEEN GLAZING BAR CENTRES

25mm Fivewall / Sevenwall									
Verge / Slope / Sheet Length (M)	6.0	5.5	5.0	4.5	4.0	3.5	3.0	2.5	2.0
Maximum Glazing Bar Centres (mm)	1020	1020	1030	1040	1055	1090	1180	1250	1250