



## FIXING INSTRUCTIONS

### RAFTER VENTILATORS

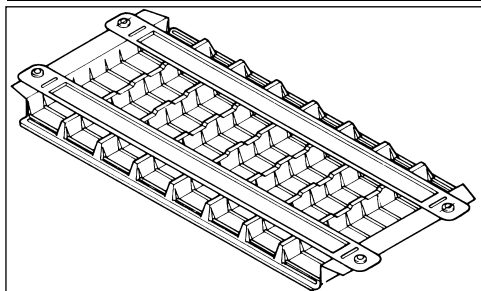

*Standard Rafter Ventilator*

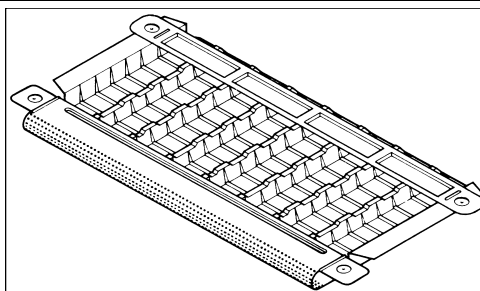

*Fly Screened Ventilator*

#### STANDARD RAFTER VENTILATOR

		<b>10,000mm<sup>2</sup>/m airgap</b>
RV401	-	400mm rafter centres
RV451	-	450mm rafter centres
RV601	-	600mm rafter centres

		<b>25,000mm<sup>2</sup>/m airgap</b>
RV625	-	600mm rafter centres

1. Fit tray centrally over wall plate and fix side flaps to rafters with staples or nails.
2. Ensure that the insulation is tucked under the vent tray.

#### FLY SCREENED VENTILATOR (for open eaves)

		<b>10,000mm<sup>2</sup>/m airgap</b>
RV401F	-	400mm rafter centres
RV451F	-	450mm rafter centres
RV601F	-	600mm rafter centres

		<b>25,000mm<sup>2</sup>/m airgap</b>
RV625F	-	600mm rafter centres

1. Fit tray centrally over wall plate but ensure that the perforated end stands at least 25mm proud from the brickwork.
2. Fix side flaps to rafters with staples or nails to the top of the rafter
3. Ensure that the insulation is tucked under the vent tray.

#### IF RETROFITTING FLY SCREENED VENTILATOR


1. Remove the bottom two rows of tiles/slates.
2. Remove the pointing to the top of the brickwork, which is usually anything from 30mm to 70mm.
3. Fresh pointing will need to be reapplied to the top of the wall to close the gap between the brickwork and the ventilator. The new pointing needs to be kept 30mm below the top of the rafters and, as before, chamfering it to follow the line of the rafters.
4. Position the Rafter Ventilator on top of the pointing, ensuring the fly screen overhangs the brickwork by 25mm.
5. Fix side flaps to rafters with staples or nails to the top of the rafter.
6. Ensure that the insulation is tucked under the vent tray and the roofing underlay lies over the ventilator.
7. The roof tiles/slates can now be retrofitted.

#### REFURBISHMENT VENTILATOR

		<b>25,000mm<sup>2</sup>/m airgap</b>
RV635	-	400mm rafter centres
RV655	-	600mm rafter centres

1. Push into place above the wall plate and ensure that the insulation is tucked into the back of the vent.
2. The vent may be stapled or nailed in position if required.

*Refurbishment Ventilator*

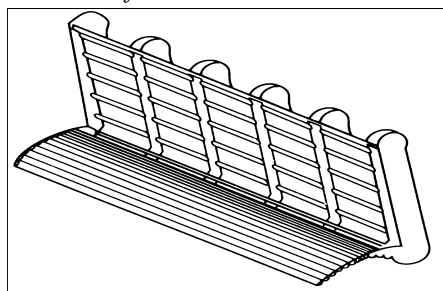

### FOR CONTINUITY OF AIRFLOW THROUGH THE EAVES USE GLIDEVALE FASCIA AND SOFFIT VENTILATORS

Company names and product descriptions are the Registered Trade Marks of the relevant manufacturer

**FOR FURTHER INFORMATION ON ALL GLIDEVALE PRODUCTS PLEASE CONTACT:**

.....

#### GLIDEVALE

2 Brooklands Road, Sale, Cheshire, M33 3SS  
Telephone: (+44) 0161 905 5700 Fax: (+44) 0161 905 2085 Web: [www.glidevale.com](http://www.glidevale.com) Email: [info@glidevale.com](mailto:info@glidevale.com)

#### BPD

A Member of the Building Product Design Group